

EMDEE HOME

LUXURY HOME TEXTILES | WINDOW TREATMENTS

TOP TREATMENT INFORMATION



Rod Pocket Only



Rod Pocket with Back Tabs



Back View of Rod Pocket with Back Tabs

A rod pocket is a simple pocket at the top of the panel that the drapery rod slides into. It's a very simple and casual look. The Rod Pocket with Back Tabs is popular because it gives you the look of even folds and without requiring any additional hardware other than the rod.

Both the Rod Pocket and Rod Pocket with Back Tabs are ideal for stationary panels but are not recommended for operable panels.

FYI: Our standard rod pocket size is 3", accommodating drapery rods up to 1 3/8". If you require a larger rod pocket, please specify. Refer to the chart below for more details.

Pole Diameter	Rod Pocket Size	Take Up
3/4" Pole	1.5" Rod Pocket	.5" Take Up
1 3/8 Pole	3" Rod Pocket	1" Take Up
2" Pole	4.25" Rod Pocket	1.5" Take Up
2.25" Pole	4.5" Rod Pocket	1.5" Take Up
3" Pole	5.5" Rod Pocket	2" Take Up

A drapery "take-up" refers to the amount of fabric length that is "lost" or shortened when a curtain is gathered onto a drapery rod, essentially the shrinkage in length that occurs due to the fabric being pulled into the rod pocket, especially when using a thick rod diameter; it's a measurement that needs to be factored in when measuring for curtains to ensure they reach the desired length after hanging.

2 Finger Pinch Pleat



3 Finger Pinch



Inverted Pleat



2 Finger Euro Pleat



3 Finger Euro Pleat



Goblet Pleat



Pro Tip:

When installing your pleated panels, the return should always be pinned to the wall as shown in the image to the left. This prevents light from coming in the side and also looks more finished.

Pleats are small sections of fabric at the panel heading that has been sewn in place to create fullness. It creates a beautiful tailored look.

Drapery pins are included at the back of the pleat. You will need a rod with rings or a traverse rod with carriers to hang your pleated panels.

Note:

We do a standard 3.5" Return and 2" Overlap unless otherwise specified.

FYI:

1 width: 50" Flat / 20" Finished Width (pleated)*

5 Pleats | 7 Drapery Pins | 6 Rings Needed

1.5 width: 75" Flat / 30" Finished Width (pleated)*

7 Pleats | 9 Drapery Pins | 8 Rings Needed

2 width: 100" Flat / 40" Finished Width (pleated)*

10 Pleats | 12 Drapery Pins | 11 Rings Needed

The Finished width is from the outside pleats and does not include the 3.5" return or 2" overlap.

When Calculating the number of rings above, We are assuming that you are attaching the return To the wall as shown on the left.




Ripplefold is a contemporary top treatment that operates on a traverse rod and is great for functional panels. We do not usually recommend Ripplefold for stationary panels. A snap tape is sewn onto the back of the panel and then snaps into Ripplefold carriers on the traverse rod.

Please note, you must specify the fullness that you want.. **60%, 80%, 100% or 120%**
Our standard fullness is 100%. [See image below:](#)


Please also specify if your panels will be center split or opens 1 way to the left or right. If it's a center draw, you'll need to specify butt master or overlap carriers. [See image below.](#)

We recommend overlap if you are applying a trim to the lead edge or your panels have blackout lining.


Ripplefold Drapery

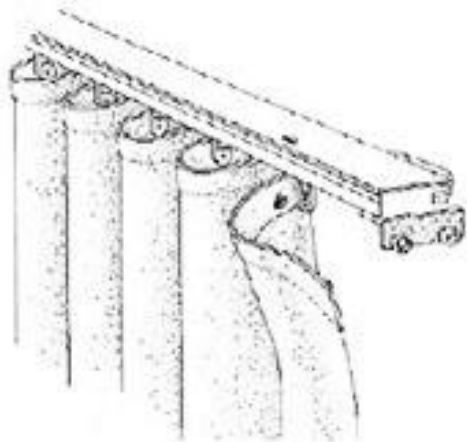

Attaches to rod with sew on snap tape

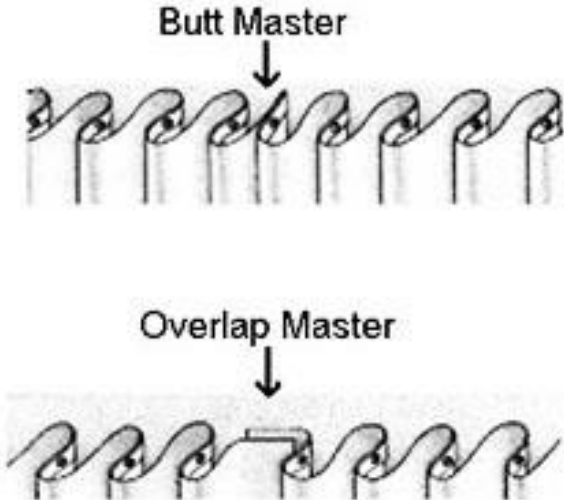

RIPPLEFOLD FULLNESS

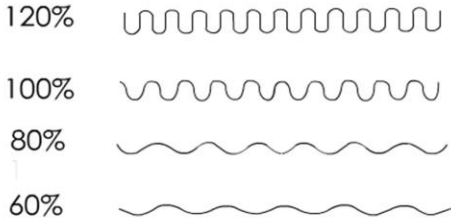

120% 100% 80% 60%



FYI:

Our standard grommet size is a #12 grommet which has an inside diameter of 1 9/16".

This grommet will accommodate a rod up to a maximum diameter of 1 3/8"

Grommets are a stylish and functional choice, offering a modern, clean-lined look. The evenly spaced metal eyelets create smooth, uniform folds, making them easy to open and close. Their simple installation of sliding directly onto a curtain rod also adds to their appeal.

Available finishes shown below: **Black, Bronze, Satin Brass or Satin Nickel**

